

PARTS LIST

No.	Description	No.	Description
1	charger	26	planet carrier
2	battery	27	pin
3	The host is connected with the bracket	28	locking piece
4	host link	29	washer
5	back cover	30	bow cap
6	switch	31	screw
7	L/F button	32	spring
8	right housing	33	the second planet gear
9	screw	34	the third sun gear
10	retaining ring	35	adjusting ring
11	spring	36	rivet
12	fillet of screw	37	shifting internal ring gear
13	shrapnel	38	the first internal ring gear
14	torque cup	39	the second sun gear
15	bearing	40	the first planet gear
16	chuck	41	gasket 1
17	screw	42	screw
18	gear vox	43	motor gear
19	steel ball	44	electric quatity display board
20	washer	45	end cap
21	pin	46	change button
22	gasket2	47	spring
23	spindle	48	left housing
24	the third annular gear	49	motor
25	the third planet gear		

ASSEMBLY DIAGRAM

