


PARTS LIST(MACHINE)

Part	Description	Qty
1	High Pressure Hose	1
2	Spray Gun Handle	1
3	Gun Hook	1
4	Nozzle	1
5	Right Machine Cover	1
6	Cable Sheath	1
7	Cable & Plug	1
8	MotorWind Right Cover	1
9	Locating Bush	2
10	Motor& Pump	1
11	MotorWind Left Cover	1
12	Swtich Joint	1
13	Key Switch	1
14	Switch Box Cover	1
15	Swtich Knob	1
16	Soap Bottle	1
17	Spray Lance	1
18	Machine Handle	1
19	Cable Reel	1
20	Logo Panel	1
21	Water Inlet Joint	1
22	Hose Connector	1
23	left Machine Cover	1

ASSEMBLY DIAGRAM(MACHINE)

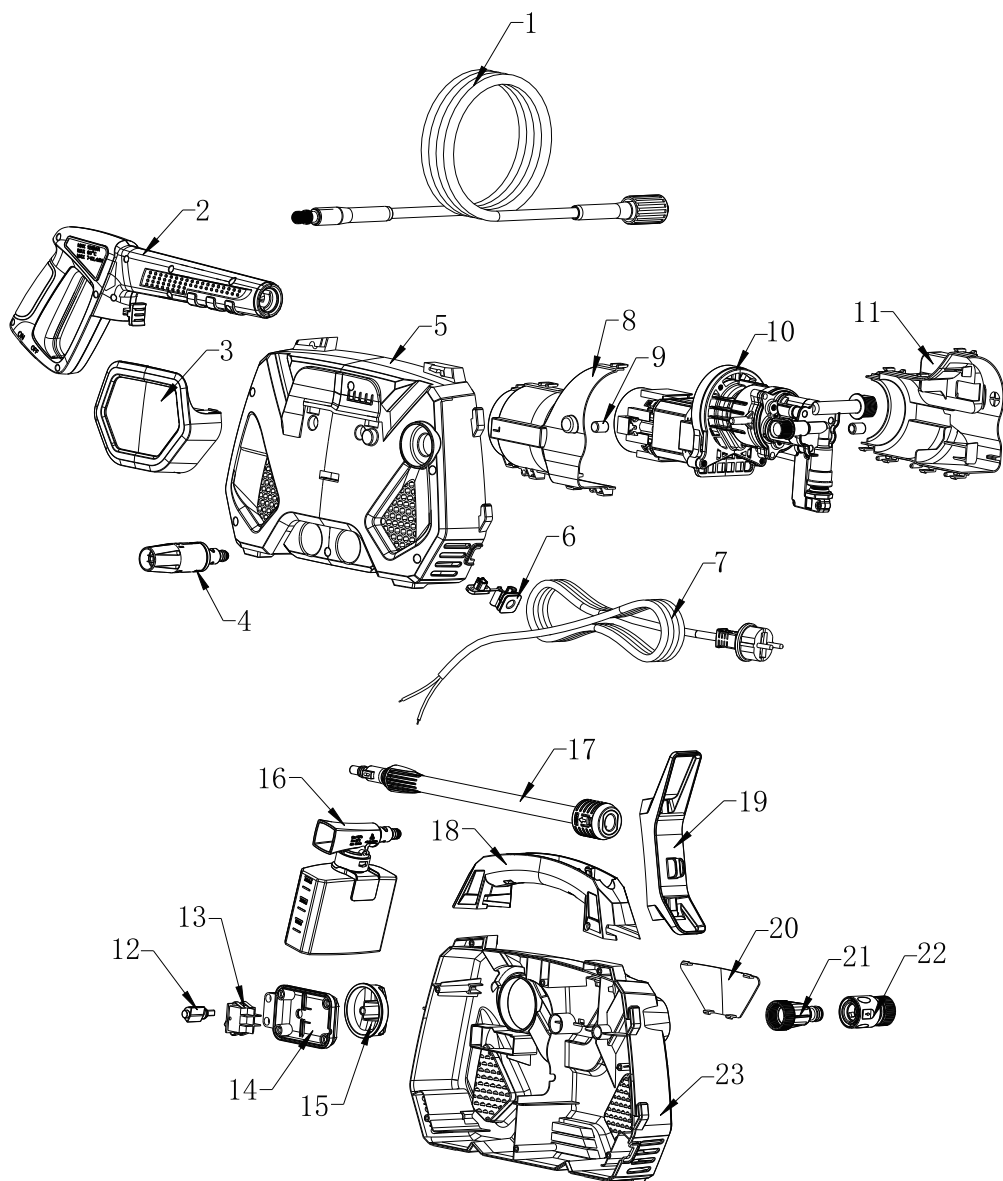

PARTS LIST(PUMP & MOTOR)

Part	Description	Qty	Part	Description	Qty
1	Screw	3	27	O Ring	1
2	Spring Gasket	3	28	General Valve Seat	1
3	Flat Gasket	3	29	O Ring	1
4	Motor	1	30	O Ring	1
5	Bearing	1	31	Valve Core	1
6	GearWheel	1	32	Valve Spring	1
7	Transmission Shaft	1	33	Triangle Ring	1
8	Pear Ring	1	34	Pump Head	1
9	Cylinder	1	35	Screw	3
10	Oil Seal Ring	1	36	O Ring	1
11	Bearing	1	37	Low Pressure Front Sleeve	1
12	Cam	1	38	O Ring	1
13	Thrust Bearing	1	39	Steel Valve Core	1
14	Flat Gasket	1	40	Spring	1
15	Screw	1	41	Back-up Ring	1
16	Plunger Spring Seat	3	42	O Ring	1
17	Plunger	3	43	O Ring	1
18	Plunger Spring	3	44	Overflow Valve Plug	1
19	O Ring	1	45	Micro Switch Box A	1
20	Plunger Frame	1	46	Micro Switch Cable	1
21	Oil Seal	3	47	Plug Spring	1
22	Guide Ring	3	48	Micro Switch	1
23	Y Water Seal	3	49	Micro Switch Box B	1
24	Pump	1	50	Slider	1
25	Low Pressure Water Valve	1	51	Screw	4
26	High Pressure Water Valve	3			

ASSEMBLY DIAGRAM(PUMP & MOTOR)

