


WOKIN

814110

AIR STAPLER INSTRUCTION MANUAL

INDUSTRIAL

21Ga
NAIL SIZE

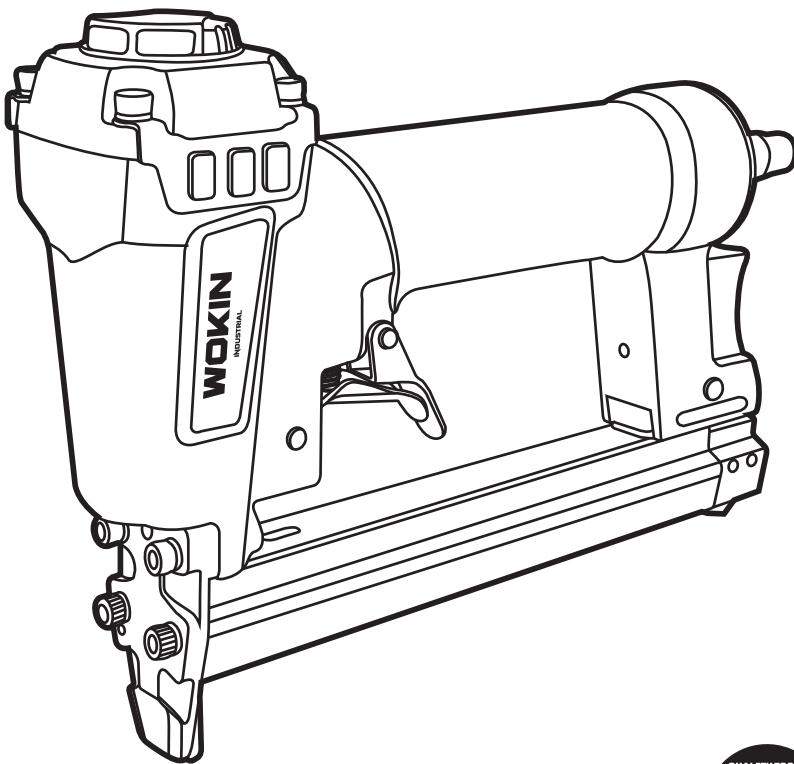

CE



SAVE THIS MANUAL!

You will need this manual for safety instructions, operating procedures and warranty. Put it and the original sales receipt in a safe dry place for future reference.

APPLICATION

Furniture manufacture, assembling the back boards of furniture.

All kinds of thin boards. Fastening the cloth and leather cover of sofas.


OPERATION NOTES

Before using this stapler, please drop some lube into pipe joints, and the pipe joints should be connected with air compressor correctly. Then install the nails into clip, close the clip, now it's ready for working.


- A. Please read this manual carefully before using stapler.
- B. Only compressed air can be used, and the working pressure must not exceed 0.8 Mpa.
- C. Oxygen or other flammable, explosive gas is forbidden to use, and high pressure air as power supply is strictly prohibited;
- D. Before operation, please make sure that the pressure meter of air compressor is correct and reliable, in order to avoid any damage;
- E. Please wearing protective glasses and gloves well while using stapler, so as to grantee safety of operator;
- F. Unloading air coupler and turn off air supply when install nails;
- G. Please do not face gun head to anybody or yourself, which would lead to injuring;
- H. During operation it is forbidden to nearing flammable, explosive articles or working under adverse circumstance with corrosive dust etc.;
- I. Take good care of stapler; do not shooting when without nails in clip;
- J. If there is any fault of nail gun, operator should immediately cut off air source and take all nails out from clip, then take bring this gun to exclusive maintenance shop for repairing;

TECHNICAL DATA


Nail size	21Ga
Operating pressure	100psi [0.7Mpa] ~ 60psi [0.4Mpa]
Magazine capacity	125pcs
Air inlet	1/4"
Crown staples	21Ga, 0.95x0.66mm: 6-16mm

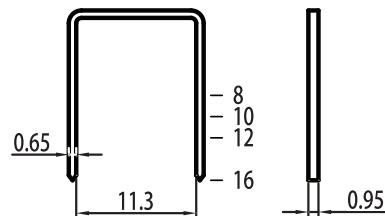

FUNCTIONS & MAINTENANCE

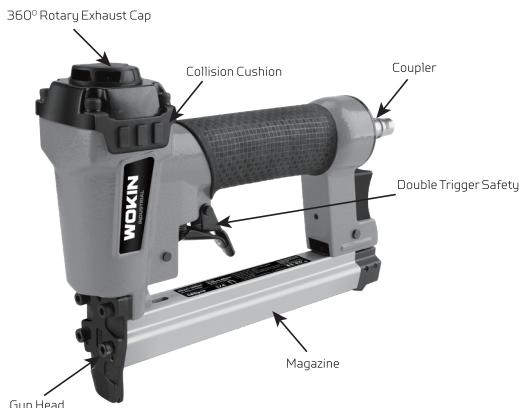

Switch of release trigger is leakage	<ol style="list-style-type: none"> 1. Check switch assembly and cleaning it if there is sundries 2. in it; or if O-ring(5x1.9) is broken replace it;
Switch of pressing trigger is leakage	<ol style="list-style-type: none"> 1. Check switch assembly, if nylon valve block is broken just replace a new one; 2. Check the balance valve, if the O-ring (31.2x2.5) is broken replace a new one;
Rear cover of release trigger is leakage	<ol style="list-style-type: none"> 1. Check rear cover assembly, clean it; and replace a new one if O-ring [16.7x2.5] is broken;
Rear cover of pressing trigger is leakage	<ol style="list-style-type: none"> 1. Check rear cover assembly, clean it if there is sundries in balance valve; 2. Replace the rectangular ring if it is broken;
Stapler-head of release trigger is leakage	<ol style="list-style-type: none"> 1. Remove cylinder cover assembly and cylinder assembly, check cylinder and O-ring (38.7x2.5), if it is damaged please replace it;
Stapler-head of pressing trigger is leakage	<ol style="list-style-type: none"> 1. Remove cylinder cover assembly,check the cushion and piston O-ring (21.3x3), if it is broken please replace a new once; 2. Please clean cushion if there is any sundries in it;
Nail-stuck	<ol style="list-style-type: none"> 1. Check the clip, if it is abrasion too much just replace a new one; 2. Check the butt and spring block, replace it if it also broken; 3. Check the nails, if it is not good just replace it; 4. Check the driver, if it's head abrasion-ed just replace it;
Unable to start	<ol style="list-style-type: none"> 1. If high air pressure (0.6~0.8Mpa) can't use but lower air pressure (0.3~0.5Mpa) can use, please replace the valve pin or valve block; 2. Remove the rear cover, add some lube on the surface of balance valve;

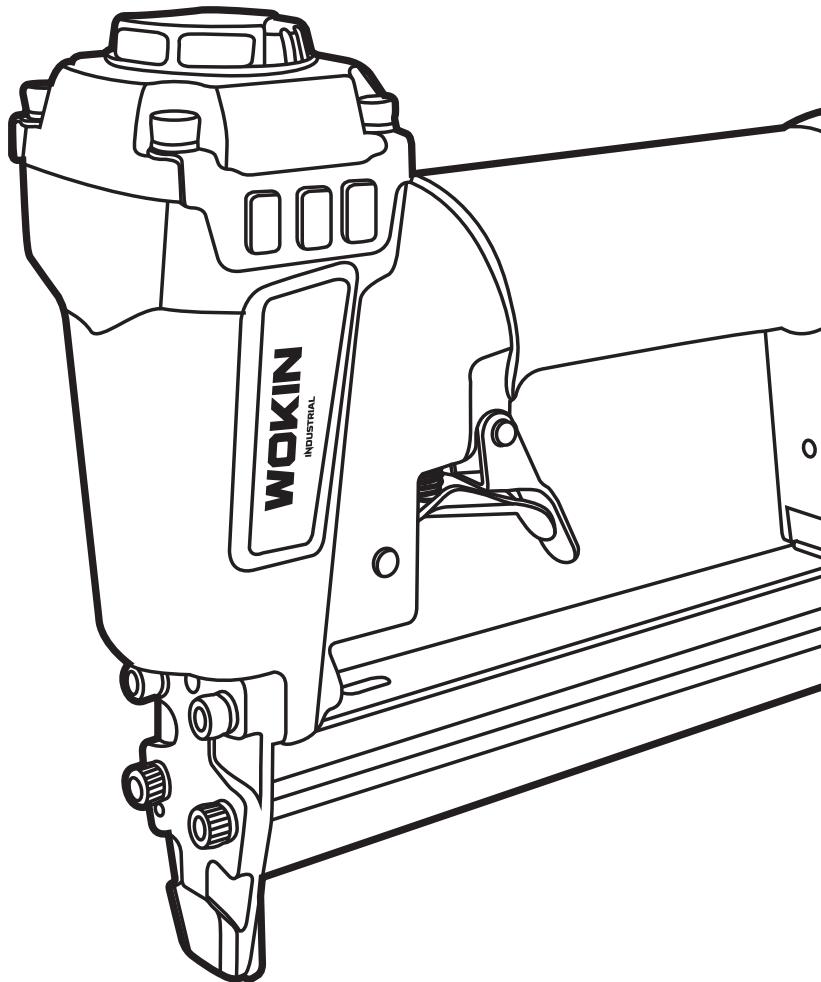

**ZJG WOKIN
INDUSTRIAL
CO.,LTD.**

www.wokintools.com

**PROFESSIONALLY
MADE IN CHINA**

WOKIN is a trademark or
registered trademark of
WOKIN TOOLS.

All rights reserved.

