

PARTS LIST

Part	Description	Qty	Part	Description	Qty
1	Collet 1/2"	1	37	Label	1
2	Screw/st5x22	4	38	Scale Label	1
3	Round Nut/ 14x19	1	39	Housing	1
4	Compression Spring/ 14x 1.2x18	2	40	Bear Cover	1
5	Screw/st4x16	12	41	Label	1
6	Left Handle Cover	1	42	Brush Holder	1
7	Screw/m5x18	4	43	Carbon Brush	1
8	Right Handle Seat	1	44	Cap Of Brush Holder	1
9	Head Housing	1	45	Axis Screw	1
10	Right Handle Seat	1	46	Height Block	1
11	Right Handle Cover	1	47	Dust bag connector	1
12	Switch	1	48	Butterfly Screw/m5x10	1
13	Strain Relief	1	49	Screw/m5x10	4
14	Cord Guard	1	50	Fine Tuning Cap/m10x 15x12	1
15	Cord	1	51	Fine Tuning Knob	1
16	Cap Of Lock	1	52	Guide Pin Spring Long	1
17	Circlip/ 12	1	53	Long Guide Pillar	1
18	Lock Pin	1	54	Guide Pin Spring Short	1
19	Compression Spring/ 8x 0.8x16	4	55	Butterfly Screw/m5x16	4
20	Screw/m5x10	3	56	Short Guide Pillar	1
21	Lock Wrench	1	57	Seat	1
22	Lock Screw	1	58	Elastic Cylinder Pin	2
23	Compression Spring	1	59	Base	1
24	Bearing 6004 2rs	1	60	Parallel Guide/ 12x200	2
25	Bearing Cover	1	61	Parallel Locating Seat	1
26	Screw/m4x10	2	62	Adjust Screw/m10x40	1
27	Armature	1	63	Trim Guide	1
28	Bearing 6200 2rs	1	64	Guide Bracket	1
29	Wave Pad/ 29	1	65	Parallel Guide	1
30	Wind Circle	1	66	Butterfly Screw/m6x10	2
31	Stator	1	67	Sample Gauge Guide	1
32	Adjust Screw/m10x80	1	68	Collet Bushing /1/4"	1
33	Screw/st5x70-c	2	69	Collet Bushing /6mm	1
34	Baffle	1	70	Wrench/24	1
35	Speeder Cover	1	71	Collet Bushing/8mm	1
36	Speeder	1			

ASSEMBLY DIAGRAM

