


WOKIN

805120

AIR IMPACT WRENCH INSTRUCTION MANUAL

3/4"
SQUARE
DRIVE

INDUSTRIAL

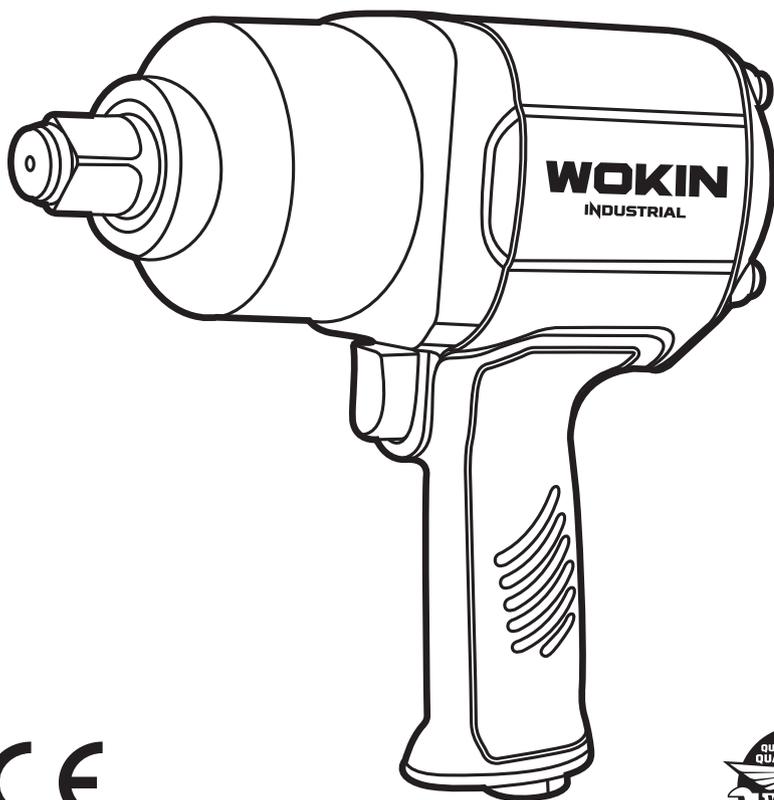

CE



SAVE THIS MANUAL!

You will need this manual for safety instructions, operating procedures and warranty. Put it and the original sales receipt in a safe dry place for future reference.

⚠ WARNING!



· Read and understand all instructions. Failure to follow all instructions listed below, may result in electric shock, fire, explosion and/or serious personal injury. It is the responsibility of the owner to make sure all personnel read this manual prior to using the tool. It is also the responsibility of the tool owner to keep this manual intact and in a convenient location for all to see and read. If the manual or product labels are lost or not legible, contact WOKIN Tools for replacements. If the operator is not fluent in English, the product and safety instructions shall be read and discussed with the operator in the operator's native language by the purchaser/owner or his designee, making sure that the operator comprehends its contents.

· Always operate, inspect and maintain this tool in accordance with American National Standards Institute Safety Code of Portable Air Tools (ANSI B186.1) and any other Chinese applicable safety codes and regulations.



· For safety, top performance and maximum durability of parts, operate this tool at 90 psig/6.2 bar max air pressure with 3/8" diameter air supply hose.



· Always wear impact-resistant eye and face protection when operating or performing maintenance on this tool (users and bystanders).



· High sound levels can cause permanent hearing loss. Always use hearing protection as recommended by your employer and OSHA regulations while using this tool (users and bystanders).

· Operators and maintenance personnel must be physically able to handle the bulk, weight and power of this tool.

· Keep the tool in efficient operating condition.



· Air under pressure can cause severe injury. Never direct air at yourself or others. Always turn off the



air supply, drain hose of air pressure and detach tool from air supply before installing, removing or adjusting any accessory on this tool, or before



performing any maintenance on this tool. Failure to do so could result in injury. Whip hoses can cause serious injury. Always check for damaged, frayed or loose hoses and fittings, and replace immediately. Do not use quick detach couplings at tool. See instructions for correct set-up.

· Keep tool out of reach of children.



· Air powered tools can vibrate in use. Vibration, repetitive motions or uncomfortable positions over extended periods of time may be harmful to your hands and arms. Discontinue use of tool if discomfort, tingling feeling or pain occurs. Seek medical advice before resuming use.



· Slipping, tripping and/or falling while operating air tools can be a major cause of serious injury or death. Be aware of excess hose left on the walking or work surface.

· Keep body working stance balanced and firm. Do not overreach when operating the tool.

· Place tool on the work before starting the tool. Do not point or indulge in any horseplay with this tool.

· Note direction of rotation before operating this tool.

· Anticipate and be alert for sudden changes in motion during start up end operation of any power tool.



· Do not carry tool by the hose. Protect the hose from sharp objects and heat.



· Tool shaft may continue to rotate briefly after throttle is released. Avoid direct contact with accessories during and after use. Gloves will reduce the risk of cuts or burns.



· Tool shaft may continue to rotate briefly after throttle is released. Avoid direct contact with accessories during and after use. Gloves will reduce the risk of cuts or burns.

· Do not use (or modify) the tool for any other purpose than that for which it was designed without consulting the manufacturer's authorized representative.

· Do not use (or modify) the tool for any other purpose than that for which it was designed without consulting the manufacturer's authorized representative.

· **Impact wrenches are not torque control devices. Fasteners with specific torque requirements must be checked with suitable torque measuring devices after installation with an impact wrench.**

· **Use only impact sockets or accessories. Do not use hand sockets or accessories.**

· **Use only impact sockets and accessories that are recommended by the manufacturer for your model. Accessories that may be suitable for one tool may create a risk of injury when used on another tool.**



· Do not lubricate tools with flammable or volatile liquids such as kerosene, diesel or jet fuel.



- This tool is not insulated against electric shock.
- This tool must not be used in explosive atmospheres.
- Use accessories recommended by WOKIN Tools.



- Servicing and repairs should only be made by an authorized service center.

- Do not remove any labels. Replace damaged labels.
- Do not force tool beyond its rated capacity.
- Failure to heed these warnings may result in serious or fatal personal injury and/or property damage.

POWER MANAGEMENT SYSTEM AND TOOL OPERATION

1. This tool includes a power management system that allows the operator to adjust the amount of output power in the clockwise (forward) direction. To adjust the power output in forward (clockwise) direction turn the dial to one of the three available positions within the swoosh. The lowest power setting is indicated by the thin swoosh area and the highest power setting is the thickest swoosh area. There is no power management in the counter-clockwise (reverse) direction.
2. The Power management system is only for reference and do not act as specific power settings. This tool includes a tip valve variable speed trigger design that further allows the operator to reduce the power output. This tool is an impacting tool and not a torque meter. When specific torque is required, it must be checked with a torque meter after fitting the fastener with the impact.
3. If a fastener does not move within five seconds, use a larger size impact. Do not use impact wrench beyond rated capacity, as this can drastically reduce the tool life.
4. Always turn off the air supply, drain hose of air pressure and detach tool from air supply before installing, removing or adjusting any part or accessory on this tool, or before performing any maintenance on this tool.

NOTE: Actual torque on a fastener is directly related to joint hardness, tool speed, condition of socket and the time the tool is allowed to impact.

Use the simplest possible tool-to-socket hook up. Every connection absorbs energy and reduces power.

NOTE: During operation, safety goggles must always be worn to guard against flying debris (users and bystanders).

FEATURES

1. Composite housing is lightweight and ergonomic designed. More comfortable and less vibration.
2. High quality material made durable anvil with special heat treatment to extend and ensure maximum tool life.
3. Forward/reverse power regulator with 3 forward power setting and one reverse setting for ease-of-use.
4. Handle exhaust with muffler reduces noise level and prevents air from blowing in user's work area.

AIR SUPPLY

1. Tools operate on a wide range of air pressures. It is recommended that air pressure measures 90 psig at the tool with the triqqer fully depressed and no load applied to the tool. Higher pressure (over 90 psig; 6.2 bar) raises performance beyond the rated capacity of the tool, which will shorten tool life and could cause injury.
2. Always use clean, dry air. Dust, corrosive fumes and/or water in the air line will cause damage to the tool. Drain the water from air lines and compressor prior to running tool. Clean the air inlet filter screen weekly. The recommended hookup procedure can be viewed in FIG.1.
3. The air inlet used for connecting air supply has standard 1/4". Line pressure should be increased to compensate for unusually long air hoses (over 25 feet). Minimum hose diameter should be 3/8" I.D. and fittings should have the same inside dimensions and be tightly secured.
4. Ensure an accessible emergency shut off valve has been installed in the air supply line and make others aware of its location.

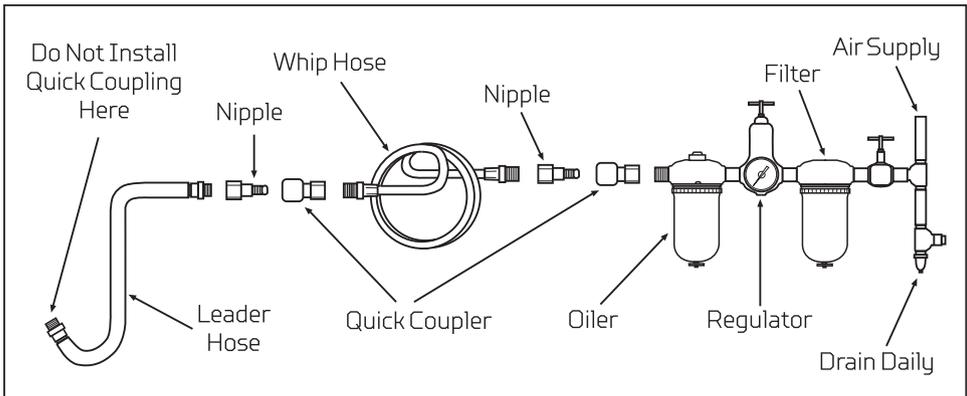


FIG.1

FUNCTIONS




TROUBLESHOOTING

Other factors outside the tool may cause loss of power or erratic action. Reduced compressor output, excessive drain on the air line, moisture or restrictions in air pipes or the use of hose connections of improper size or poor conditions may reduce air supply. Grit or gum deposits in the tool may cut power and may be corrected by cleaning the air strainer and flushing out the tool with gum solvent oil or an equal mixture of SAE #10 and kerosene. If outside conditions are in order, disconnect tool from hose and take tool to your nearest authorized service center.

LUBRICATION AND MAINTENANCE

Lubricate the air motor daily with high quality air tool oil. If no air line oiler is used, run 1/2 oz. of oil through the tool. The oil can be squirted into the tool air inlet or into the hose at the nearest connection to the air supply, then run the tool. A rust inhibitive oil is acceptable for air tools.

WARNING: After an air tool has been lubricated, oil will discharge through the exhaust port during the first few seconds of operation. The exhaust port must be covered with a towel before applying air pressure to prevent serious injury.

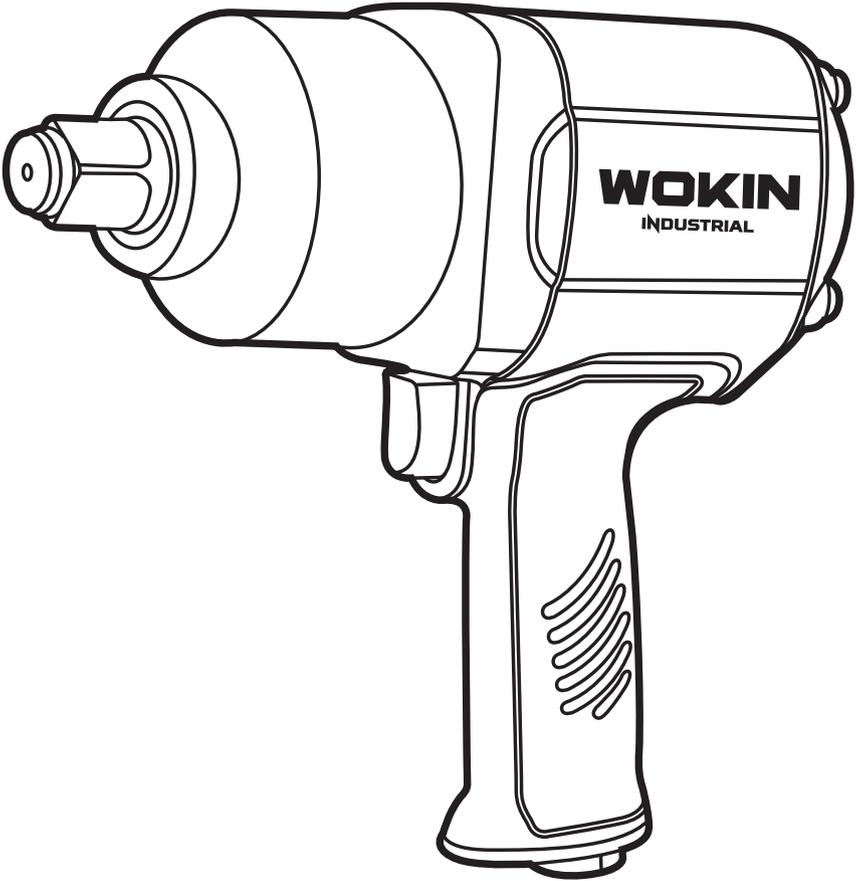

**ZJG WOKIN
INDUSTRIAL
CO.,LTD.**

www.wokintools.com

**PROFESSIONALLY
MADE IN CHINA**

WOKIN is a trademark or
registered trademark of
WOKIN TOOLS.

All rights reserved.

