

PARTS LIST

Part	Description	Qty	Part	Description	Qty
1	Wire spring for shaft 28	1	41	6201 Ball Bearing	1
2	Lining ring	1	42	Cross Slotted screw 5x10	2
3	Slide sleeve	1	43	Armature 220-240V	1
4	Spring	1	44	Screw 5x60	2
5	Steel ball 8	6	45	Fan Guide	1
6	Flange cover	4	46	Stator 220-240V	1
7	Hex.Socket Bolt M8x35	1	47	Washer	1
8	Flat Washer 8		48	Isolation ring	1
9	O ring	1	49	608 Ball Bearing	1
10	Impact Pin	1	50	Housing Ass'y	1
11	Impact Pin holder	1	51	Hex. Socket Bolt Sets	4
12	Rubber shock absorber	1	52	Helical spring	2
13	O ring	1	53	Carbon Brush bracket	2
14	Cylinder Head	1	54	Carbon Brush	2
15	Retaining Ring	1	55	Cross head screws 3x10	4
16	Cylinder	1	56	Back Cover	1
17	Front Cover	1	57	ST4x16 Tapping Screw	2
18	Hex.Socket Bolt M6x35	4	58	Decorative Cover	1
19	O ring	1	59	Shock Absorption Spring	2
20	Impact piston	1	60	Spring Rack	1
21	O ring 28.4x3.6	2	61	Shock Absorption Screw	2
22	Piston Pin	1	62	Shock Absorption Jacket	1
23	Piston	1	63	Hex. Socket Bolt M5x16	1
24	Cylinder Gasket	1	64	Main Handle	1
25	Gear Box	1	65	Switch	1
26	Fix Pin		66	Capacity	1
27	Oil Tank Cover	1	67	Inductance	1
28	O ring 58x1.9	1	68	Main Handle Cover	1
29	Connecting Rod Ass'y	1	69	ST4x16 Tapping Screw	6
30	Steel sleeve	1	70	Tapping Screw ST4x20	1
31	Crank shaft	1	71	Cord Clip	1
32	4x4x12 Palt Key	2	72	Cord Armor	1
33	Ø47 Retaining Ring	1	73	Cord	1
34	6303 Ball Bearing	1	74	M8x150 hexagon screw	1
35	Oil Seal Ring	1	75	Hoop	1
36	Gear	1	76	Hoop Seat	2
37	Gourd Leakproof Ring	1	77	Handle Rotary Knob	1
38	6001 Ball Bearing	1	78	Nut M8	1
39	Middle Cover	1	79	Hoop Bracket	2
40	Ø11.7 Greaseproof Ring	1	80	Side Handle	1

ASSEMBLY DIAGRAM

