


### ASSEMBLY DIAGRAM AND PARTS LIST


### A

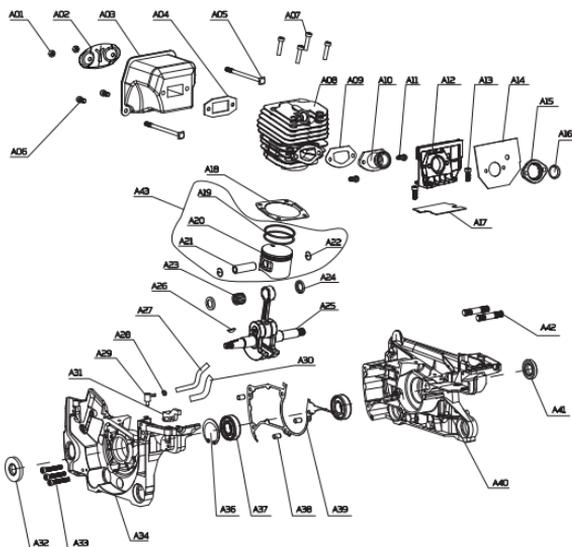

NO.	Description	Qty.
A01	Nut M5	2
A02	Muffler cover	1
A03	Muffler	1
A04	Muffler gasket	1
A05	Muffler bolt M5×10	2
A06	Screw M5×10	2
A07	Screw M5×20	4
A08	Cylinder	1
A09	Inlet pipe gasket	1
A10	Inlet pipe	1
A11	Screw M5×12	2
A12	Carburetor gasket	1
A13	Screw M5×14	2
A14	Carburetor gasket	1
A15	Spacer	1
A16	Lining ring	1
A17	Bracket gasket	1
A18	Cylinder gasket	1
A19	Piston ring	2
A20	Piston	1
A21	Piston pin	1
A22	Piston clip	2
A23	Piston roller bearing	1
A24	Washer	2
A25	Crankshaft	1
A26	Woodruff key 3×Ø10	1
A27	Vacuum pipe Ø3×Ø6×70	1
A28	Vacuum pipe clip	1
A29	Elbow	2
A30	High-temperature sleeve	1
A31	Guide(H)	1
A32	Oil seal(left)	1
A33	Screw M5×30	5
A34	Crankcase	1
A36	Snap ring Ø35	1
A37	Bearing 6202	2
A38	Locaion pin Ø6×10	3
A39	Crankcase gasket	1
A40	Crankcase(right)	1
A41	Oil seal(right)	1
A42	Double-screw bolt M8×42A	2
A43	Piston kit c/w ring, pin, clip	1


## ASSEMBLY DIAGRAM AND PARTS LIST

### B

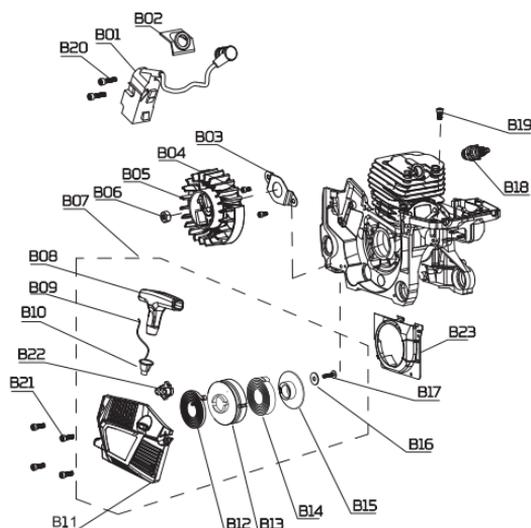

NO.	Description	Qty.
B01	Ignition coil	1
B02	Ignition cover	1
B03	Oil seal plate	1
B04	Screw M4×8	2
B05	Flywheel	1
B06	Nut M8×1	1
B07	Start assy	1
B08	Start knob	1
B09	Start roop	1
B10	Ropr. mouth washer	1
B11	Start cover	1
B12	Start spring	1
B13	Start reel-big	1
B14	Recoil spring	1
B15	Start reel-small	1
B16	Washer Ø5.2 × Ø16×1	1
B17	Screw M5×16	1
B18	Spark plug	1
B19	Screw M5×10	1
B20	Screw M5×20	2
B22	Screw M5×14	4
B21	Lh guide	1
B23	Fan cover	1


### C

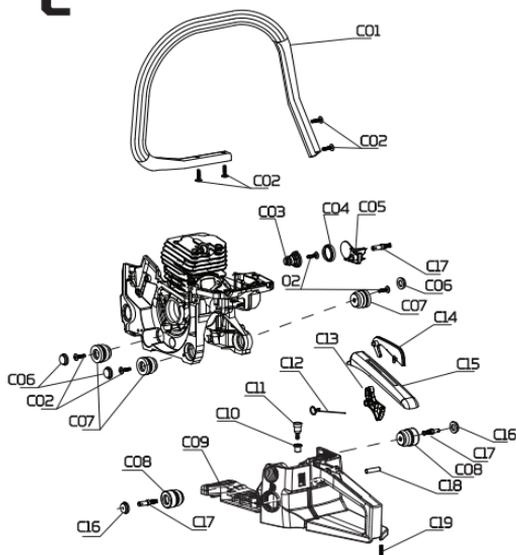

NO.	Description	Qty.
C01	Front handle comp	1
C02	Screw ST4.8×14F	8
C03	Tower spring	1
C04	Tower spring seat	1
C05	Chain catcher	1
C06	Damper cover	3
C07	Crankcase damper	3
C08	Fuel tank damper	2
C09	Fuel tank	1
C10	Balancer seat	1
C11	Balancer assy	1
C12	Trigger spring	1
C13	Trigger	1
C14	Throttle interlock arm	1
C15	Rear handle cover	1
C16	Fuel tank damper cover	2
C17	Screw	3
C18	Trigger pin Ø6×25	1
C19	Screw ST3.9×20F	1


### ASSEMBLY DIAGRAM AND PARTS LIST

#### D

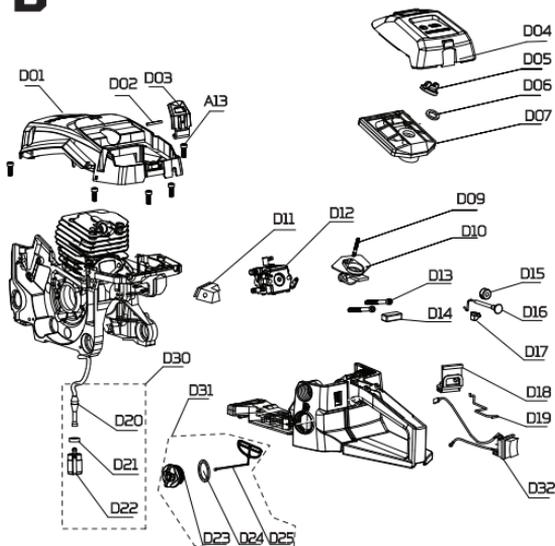


NO.	Description	Qty.
D01	Top cover	1
D02	Pin Ø3×31	1
D03	Cover lock-H	1
D04	Air filter cover	1
D05	Air filter knob	1
D06	Air filter knob washer	1
D07	Air filter	1
D09	Double-screw bolt M5×39	1
D10	Mainfold	1
D11	Guide(T)	1
D12	Carburetor	1
D13	Screw M5×50	2
D14	Mainfold damper	1
D15	Choke rod damper	1
D16	Choke rod	1
D17	Damper	1
D18	Dust shield	1
D19	Throttle rod	1
D20	Fuel pipe	1
D21	Pendant	1
D22	Fuel filter	1
D23	Fuel cap	1
D24	Washer	1
D25	Element	1
D30	Fuel pipe assy	1
D31	Fuel cap assy	1
D32	On-off switch	1
A13	Screw M5×14	5

#### E

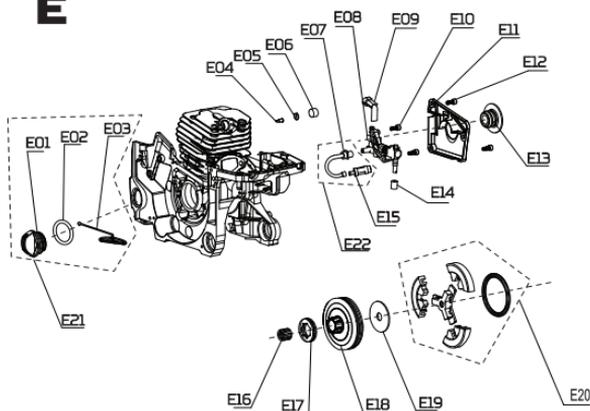


NO.	Description	Qty.
E01	Oil cap	1
E02	Washer	1
E03	Element	1
E04	Oil tank valve	1
E05	Oil tank valve retainer	1
E06	Sponge	1
E07	Oil pipe	1
E08	Oil pump	1
E09	Oil pump pipe	1
E10	Screw M4×14	2
E11	Oil pump cover	1
E12	Screw M4×10	3
E13	Worm gear	1
E14	Sealed sponge	1
E15	Oil filter	1
E16	Clutch roller bearing Ø12×15×14.5	1
E17	Sprocket	1
E18	Clutch drum	1
E19	Clutch washer	1
E20	Clutch assy	1
E21	Oil cap assy	1
E22	Oil pipe assy	1

## ASSEMBLY DIAGRAM AND PARTS LIST

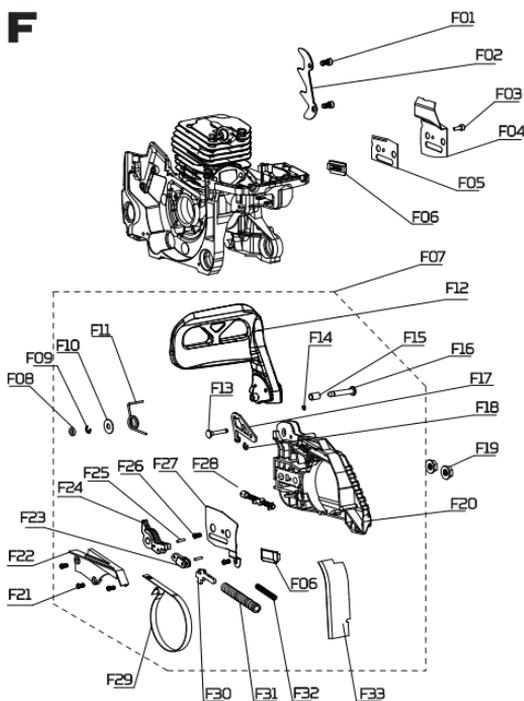

NO.	Description	Qty.
F01	Screw M5×10	2
F02	Spike bumper	1
F03	Screw M4×8	1
F04	Guide plate	1
F05	Guide plate gasket	1
F06	Chain guide	2
F07	Brake assy	1
F08	Brake damper	1
F09	Snap ring Ø5	1
F10	Washer Ø6.2×18×1	1
F11	Brake spring	1
F12	Front hand guard	1
F13	Stopper pin	1
F14	Snap ring Ø3	1
F15	Front hand jacker	1
F16	Guard pin	1
F17	Stopper plate	1
F18	Snap ring Ø4	1
F19	Nut M8×1.25	2
F20	Clutch cover	1
F21	Screw ST3.9×10F	3
F22	Brake spring cover	1
F23	Brake lever(sub)	1
F24	Brake lever(main)	1
F25	Brake lever pin 3×8.8	2
F26	Screw ST3.9×8F	2
F27	Tensioned plate	1
F28	Tensioned set	1
F29	Brake band	1
F30	Brake arm	1
F31	Brake spring(main)	1
F32	Brake spring(sub)	1
F33	Sawdust protector	1

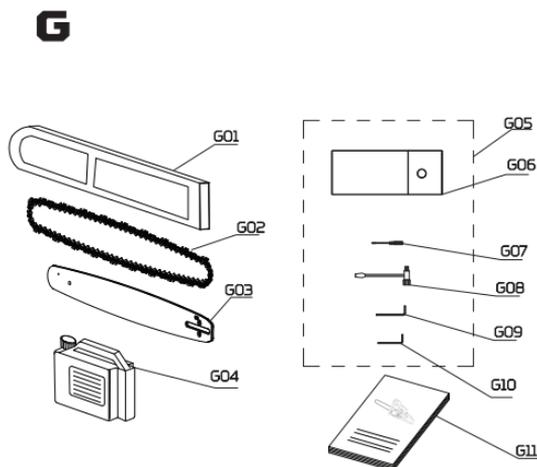

NO.	Description	Qty.
G01	Bar cover	1
G02	Saw chain	1
G03	Guide bar	1
G04	Mixture	1
G05	Tools	1
G06	Tooskit	1
G07	Screwdriver	1
G08	Wrench	1
G09	S4 Hexagon ring spanner	1
G10	S3 Hexagon ring spanner	1
G11	User's manual	1