



ASSEMBLY DIAGRAM PART-A[MACHINE]

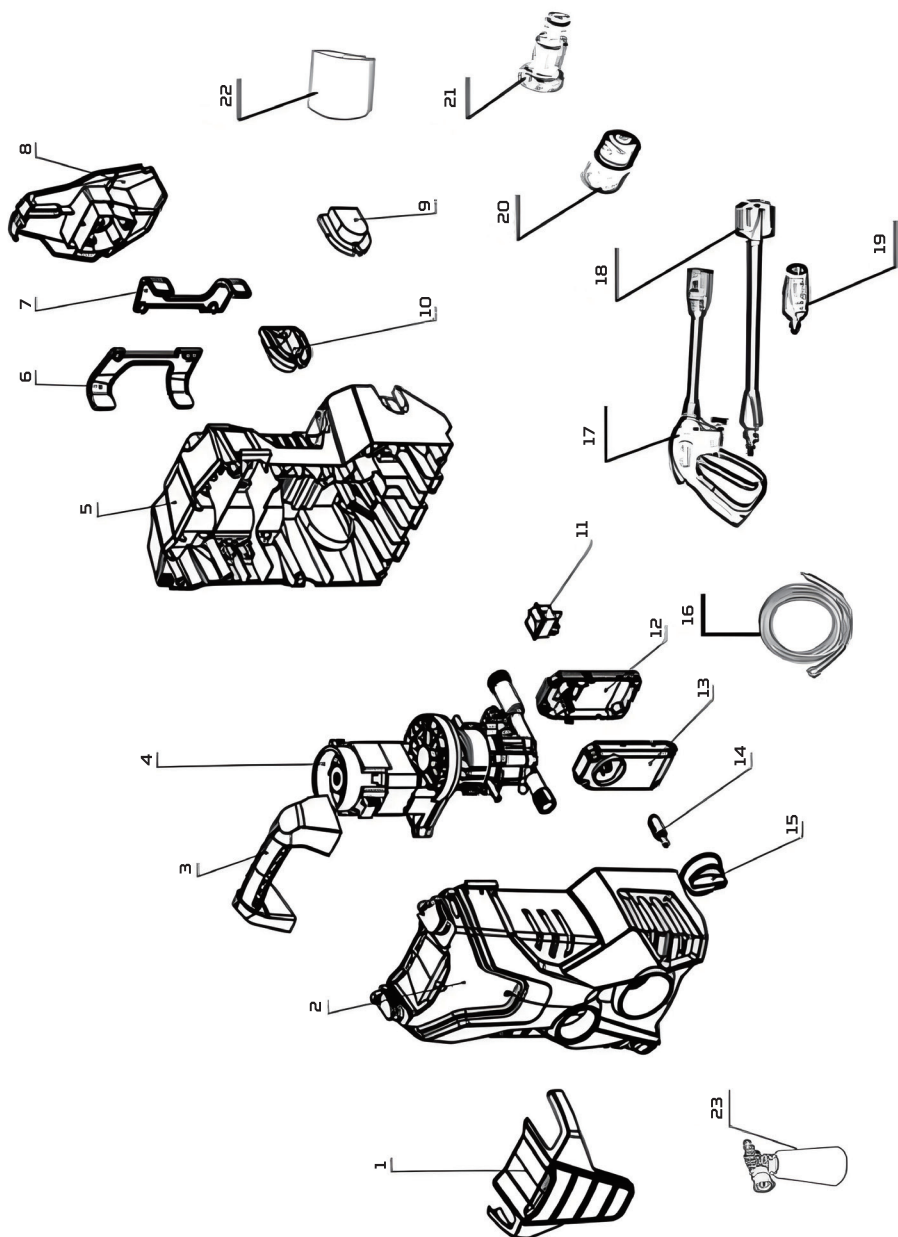

PARTS LIST PART-A[MACHINE]

Part	Description	Qty
1	Decoration case	1
2	Top cover	1
3	Handle	1
4	Pump & motot	1
5	Base cover	1
6	Right cable reel baffle	1
7	Left cable reel baffle	1
8	Cable reel	1
9	Left wheel cover plate	1
10	Right wheel cover plate	1
11	Switch	1
12	Switch box cover	1
13	Switch box	1
14	Switch joint	1
15	Switch knob	1
16	High pressure tube	1
17	Spray gun	1
18	Gun lance	1
19	Spray nozzle	1
20	HPC connector	1
21	Water inlet joint	1
22	Gun hook	1
23	Soap bottle	1

ASSEMBLY DIAGRAM PART-B(PUMP)

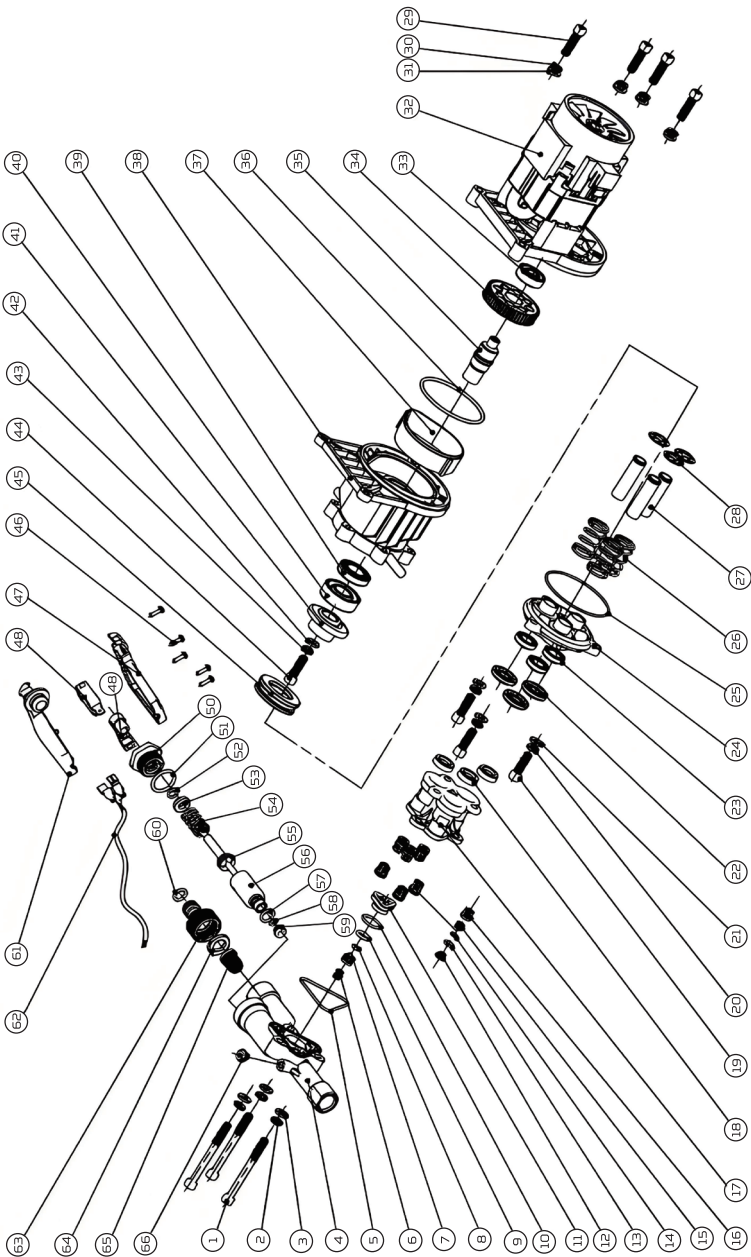

PARTS LIST PART-B(PUMP)

Part	Description	Qty	Part	Description	Qty
1	Screw	3	34	Gearwheel	1
2	Spring gasket	3	35	Transmission shaft	1
3	Flat gasket	3	36	O ring	1
4	Pump cover	1	37	Cylinder gasket	1
5	Seal	1	38	Cylinder	1
6	General valve spring	1	39	Oil seal ring	1
7	Valve core	1	40	Bearing	1
8	O ring	1	41	Cam	1
9	O ring	1	42	Flat gasket	1
10	O ring	1	43	Spring gasket	1
11	General valve seat	1	44	Screw	1
12	Valve cover	6	45	Thrust bearing	1
13	O ring	6	46	Screw	5
14	Valve plates	6	47	Rear cover	1
15	Valve spring	6	48	Micro switch	1
16	Valve seat	6	49	Push arm	1
17	Pump	1	50	Overflow valve plug	1
18	Y water seal	3	51	O ring	1
19	Screw	3	52	O ring	1
20	Spring gasket	3	53	Retaining ring	1
21	Flat gasket	3	54	Overflow valve spring	1
22	Guide ring	3	55	Push rod	1
23	Oil seal	3	56	Push rod seat	1
24	Plunger frame	1	57	O ring	1
25	O ring	1	58	O ring	1
26	Plunger spring	3	59	Push rod seat cover	1
27	Plunger	3	60	O ring	1
28	Plunger spring seat	3	61	Top cover	1
29	Screw	4	62	Inner wire	1
30	Spring gasket	4	63	Connector A	1
31	Flat gasket	4	64	Connector A gasket	1
32	Motor	1	65	Filter	1
33	Bearing	1	66	Screw	1